

### **Checking Test Relief Valve**


Connect the battery clamps on ATS machine to power

Hit the PSI Button for pressure reading which should read P.000

Put a Fitting on the end of the black hose and then put the hose into the fill neck on the new oil tank.

Hold the emergency fill button

Pinch the hose to create pressure. The Pressure relief valve should not open until 155-160 PSI. If it opens prematurely then you need to adjust pressure relief valve. How to do this go to next step.

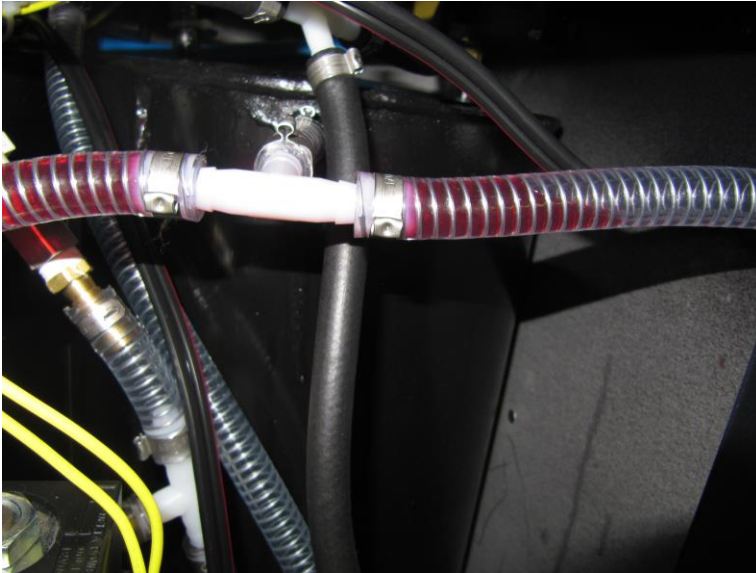

### **Adjust Pressure relief Valve**

To adjust pressure relief valve you should loosen the nut and then tighten the top valve with an Allen key.

Tighten clockwise more pressure counter clockwise less pressure.

