

AEF display description:

Error code:

1---Change Fluid

2---Fluid level low; (25 Liter)

3---Tank Empty (25 Liter)

4---Ultrasonic Sensor Err

5---Engine fill sol

6---Engine drain sol

7---Temp Sensor Err

8---Tank Full (not displayed)

Process key display:

left digit	content meaning
blank	sensor data
L	tank liter left
r	temperature
U	flushes done (for this load)
f	flushes left (for this load)
b	total bottles of detergent used (total fills done)
blank or number	total flushes done