

PSF 200 Power Steering Flusher OPERATION MANUAL

1. Connect to battery (red to + black to -)

2. If using a cleaner - place the shorter clear hose into the power steering oil tank and pump out sufficient amount of fluid for the cleaner fluid by turning on the USED OIL switch. Then adding the cleaner into the reservoir.



3. Start the engine and turn steering wheel 12 times both directions. Leave steering wheel turned to the left.

4. Turn on both pumps (new and used) at the same time and run the pumps until there is about 4- 6 oz. left of new fluid in the container for top up.

After service you MUST test drive vehicle and THEN check fluid levels once again.

**ATTENTION NEW PSF 200 CUSTOMER -
This PSF 200 unit needs to be primed before use.**

1. Connect to battery (red to + black to -)

2. Pour power steering fluids into top pump through the hose with a 90° elbow, run the pump for a second or two.

3. To prime the bottom pump connect to battery reversed (red to - black to +)

4. Pour power steering fluid into the bottom pump through the short hose and run the pump for a second or two.

5. DO NOT RUN FOR MORE THAN 30 SECONDS

Technical Support Line Toll Free 1-888-467-4142