


## Gm Thermostat Bypass Hook Up

1. Under the vehicle, remove the transmission thermostat which is on the driver side of transmission.



2. Install the #7120 adapter and transmission lines as per picture.

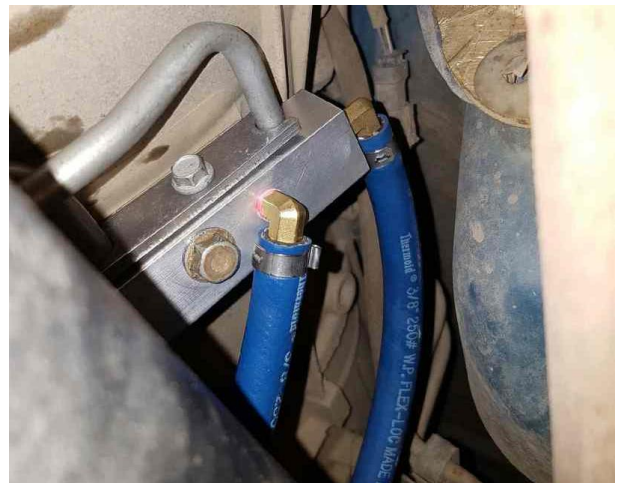

3. You now will have flow all the time, bring transmission to 50 degree celsius and preform service.