

# ATS FI-1 Fluid Injector

## 6 Step Set Up



## Attachment Pieces:



Fluid Injector body



#6021 x1



#6076 x1




#6002 x1



#6012 x2



#6013 x1

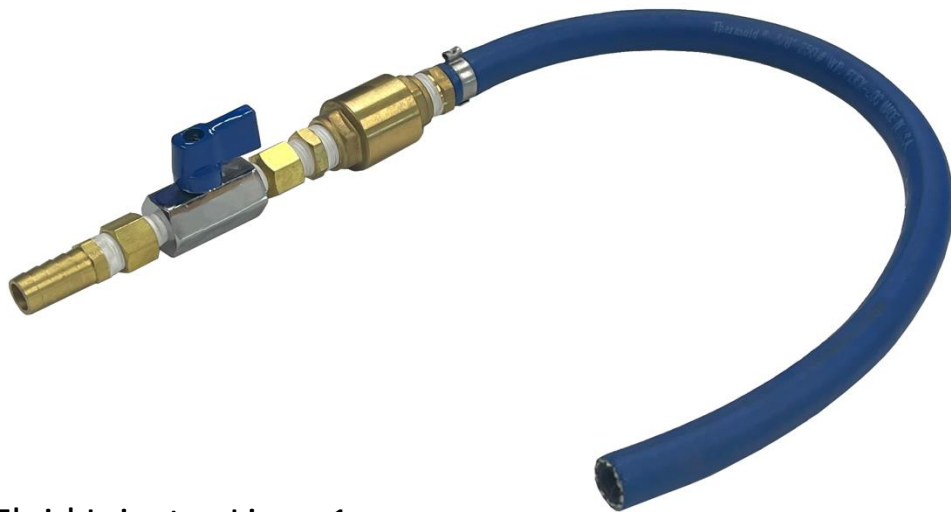

Fluid Injector Line x1

## What You'll Need ...


- 1) Crescent Wrench
- 2) Drill / bit
- 3) Socket
- 4) Ear Clamp Pliers



**\*\*Please Note \*\***  
IF THE ATS MACHINE IS PURCHASED WITH A FLUID INJECTOR CANISTER, PROCEED TO STEP 5.

**Step 1** -Remove the front hose attachment and insert part #6021

**Step 2** -Continue to insert part #6002 and #6076 onto #6021

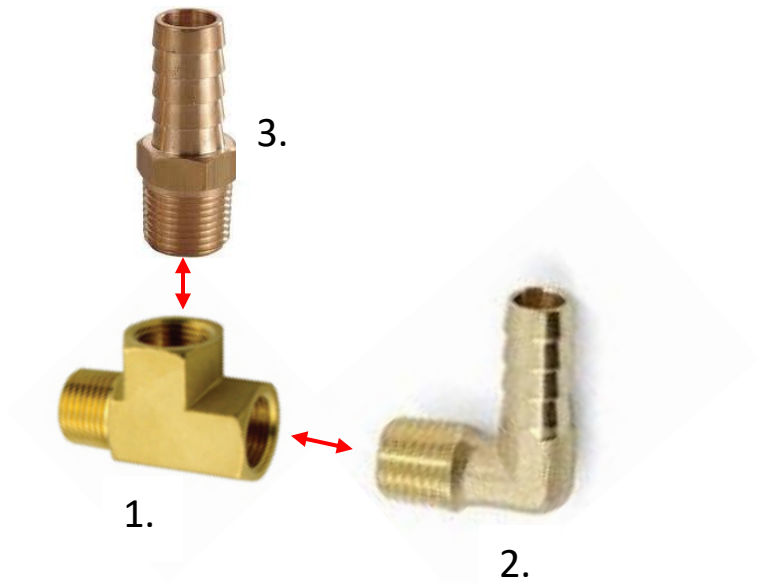






**Step 3** - Using one of the #6012, reattach the  
ATS hose to #6002

**Step 4** – using the last #6012, attach the open-  
end hose of the fluid injector line to #6076

Connect the Fluid injector Line here

Connect the ATS Machine hose here

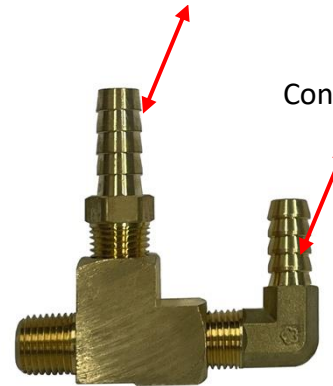

**DON'T FORGET TO  
CRIMP BOTH HOSES**

Step 5 – Using the top 4 screws, attach the fluid injector body to the ATS machine.

Step 6 – Using crimp 6013 attach the fluid injector line and body together.

