

FITTING HOOK-UP ON A FORD TRANSIT





#7094



#601



DFM12



#600



FITTINGS NEEDED TO DO THIS
SERVICE ARE



**LOCATE THE COOLER LINE
BEHIND THE RIGHT HEAD-LIGHT**






Remove the 8 millimeter bolt and pull the transmission cooler line out



Make sure to
remove both rubber
O-rings from the
transmission cooler
to the transmission
line

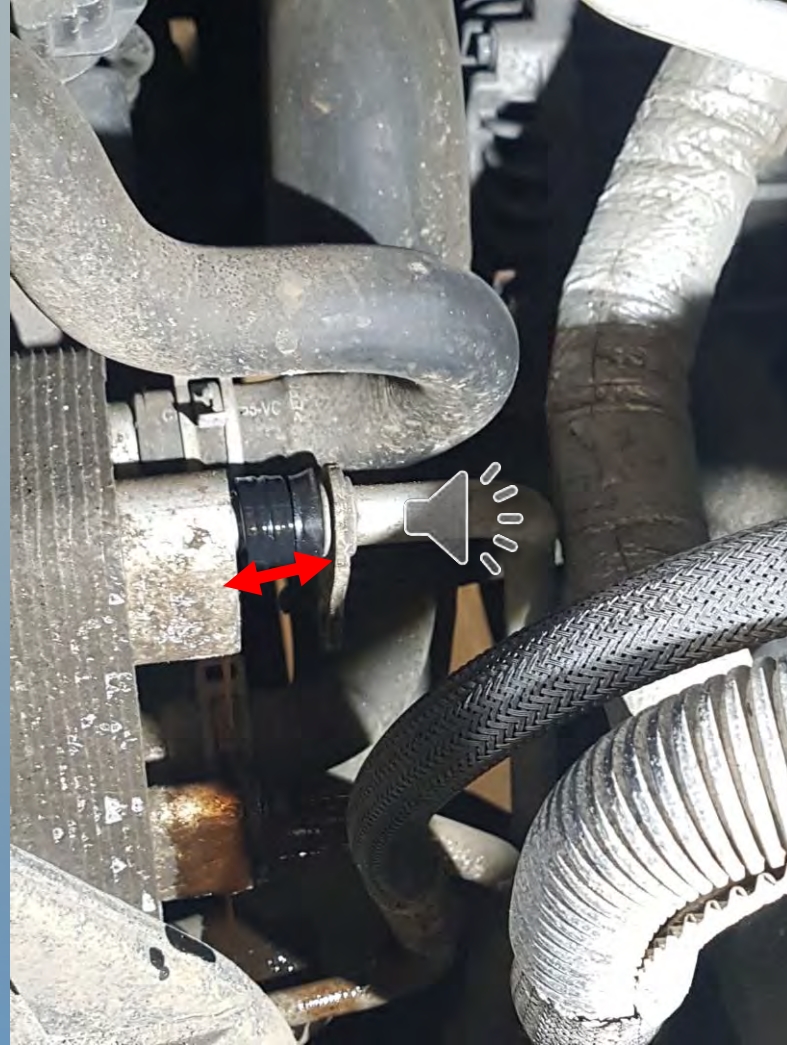

Insert fitting 600 into the transmission cooler and fitting 601 onto the transmission line.





#600

#601


Bolt fitting 601 to the cooler line, or use vise grip to keep the fitting attached



Connect Fittings 600
and 601 to 7094


Connect either hose
from the ATS machine
to fitting 7094

Lift the vehicle on a hoist and locate the dipstick plug (on the front right hand side)

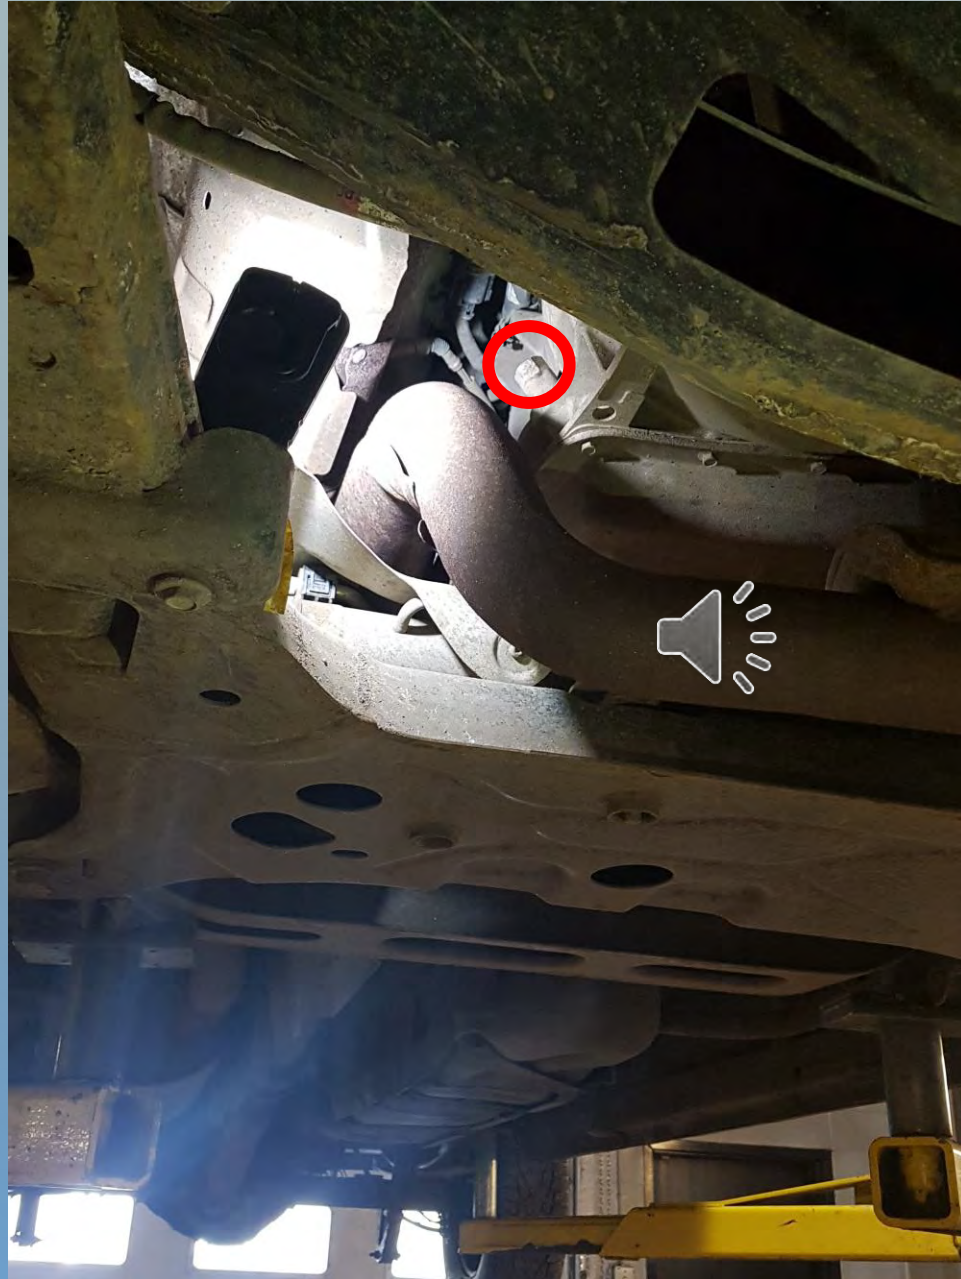

Remove the dipstick and
attach fitting DFM12
(secure hose from
touching the exhaust
pipe)



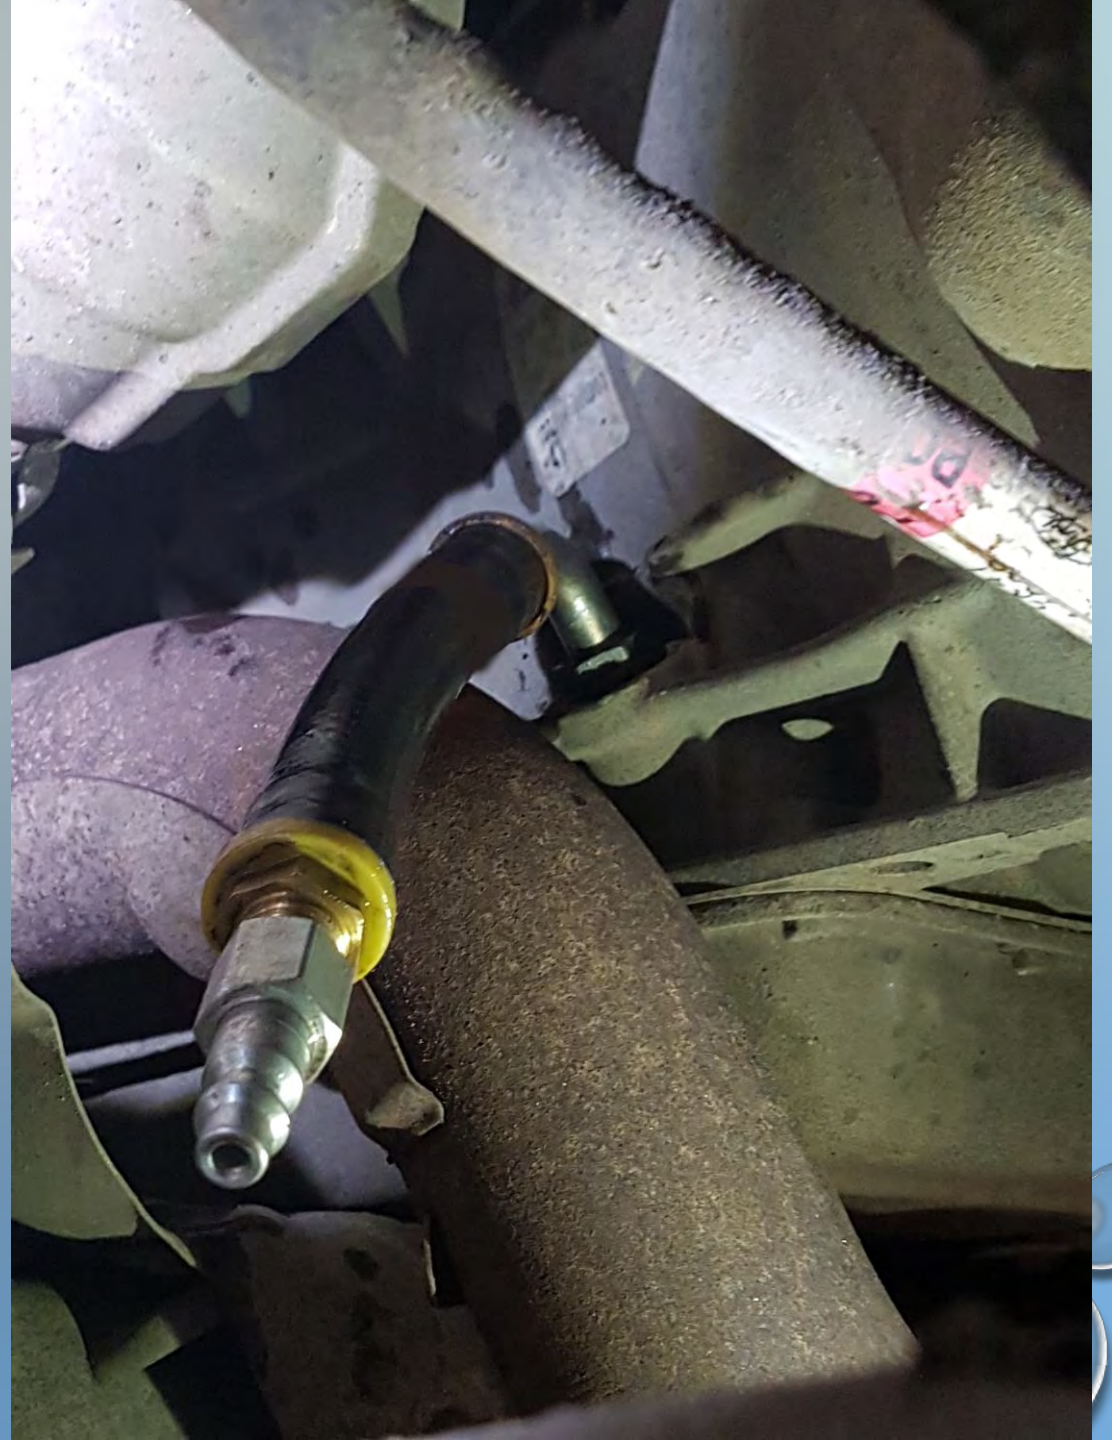



Connect the last black hose off the ATS machine to fitting DFM 12

Ford Transit fitting hook-up is now complete

For machine hookup, refer to the
ATS 320 operations video

