

GM 8 Speed bypass

NO THERMOSTAT

KENVO TECHNOLOGY INC.
780-454-6390 | 11543 160ST EDMONTON AB

Fittings needed to complete the service



#GMA38



#4208



#7097

On the Vehicle locate the Transmission Cooler line. Normally found on the right-hand side of the vehicle, beside the filter box.



Disconnect the transmission cooler line, and hook up part # 4208 and GMA38



CAUTION

BE SURE TO DISCONNECT THE TRASMISSION COOLER LINE, NOT THE OIL COOLER LINE


Connect both fittings, 4208 and GMA38 to fitting 7094.

Once all the fittings are connected, attach either black hose from the ATS machine to fitting 7094.



Under the Vehicle, locate the transmission pan and remove the fill plug then, thread in fitting # 7097.

Attach fitting to the other black hose from the ATS machine.

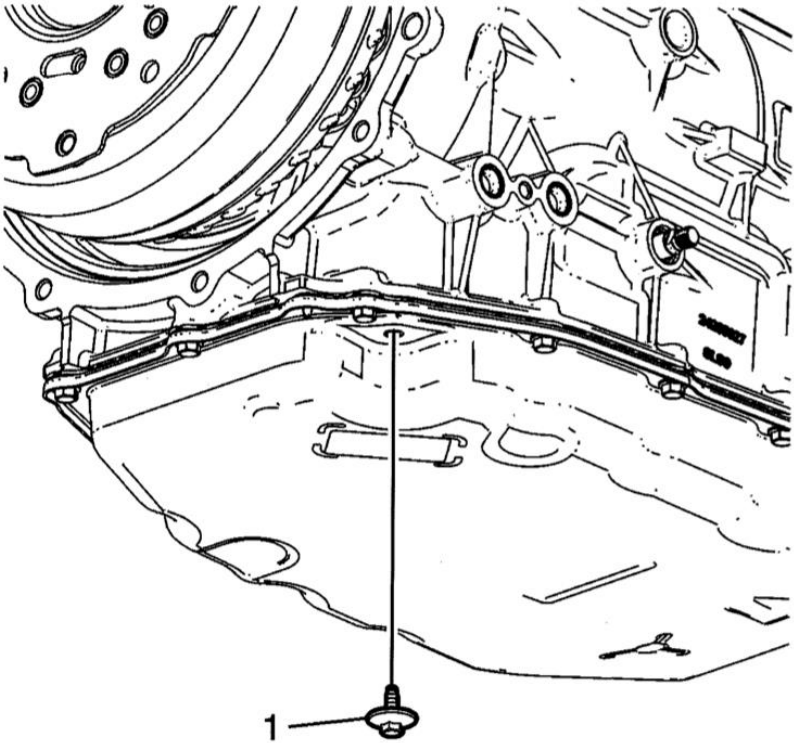

Begin the exchange process

If you need to fill or drain transmission fluid from the vehicle then proceed with the following steps

After the exchange is done,

1. Remove both 7094 and 7097 (put the fill plug back into the transmission pan).
2. Attach either back hose from the ATS machine to the remaining two fittings, 4208 and GMA38.
3. Fill or drain to desired amount.