



Bolt this
down on
the
bottom of
the
machine

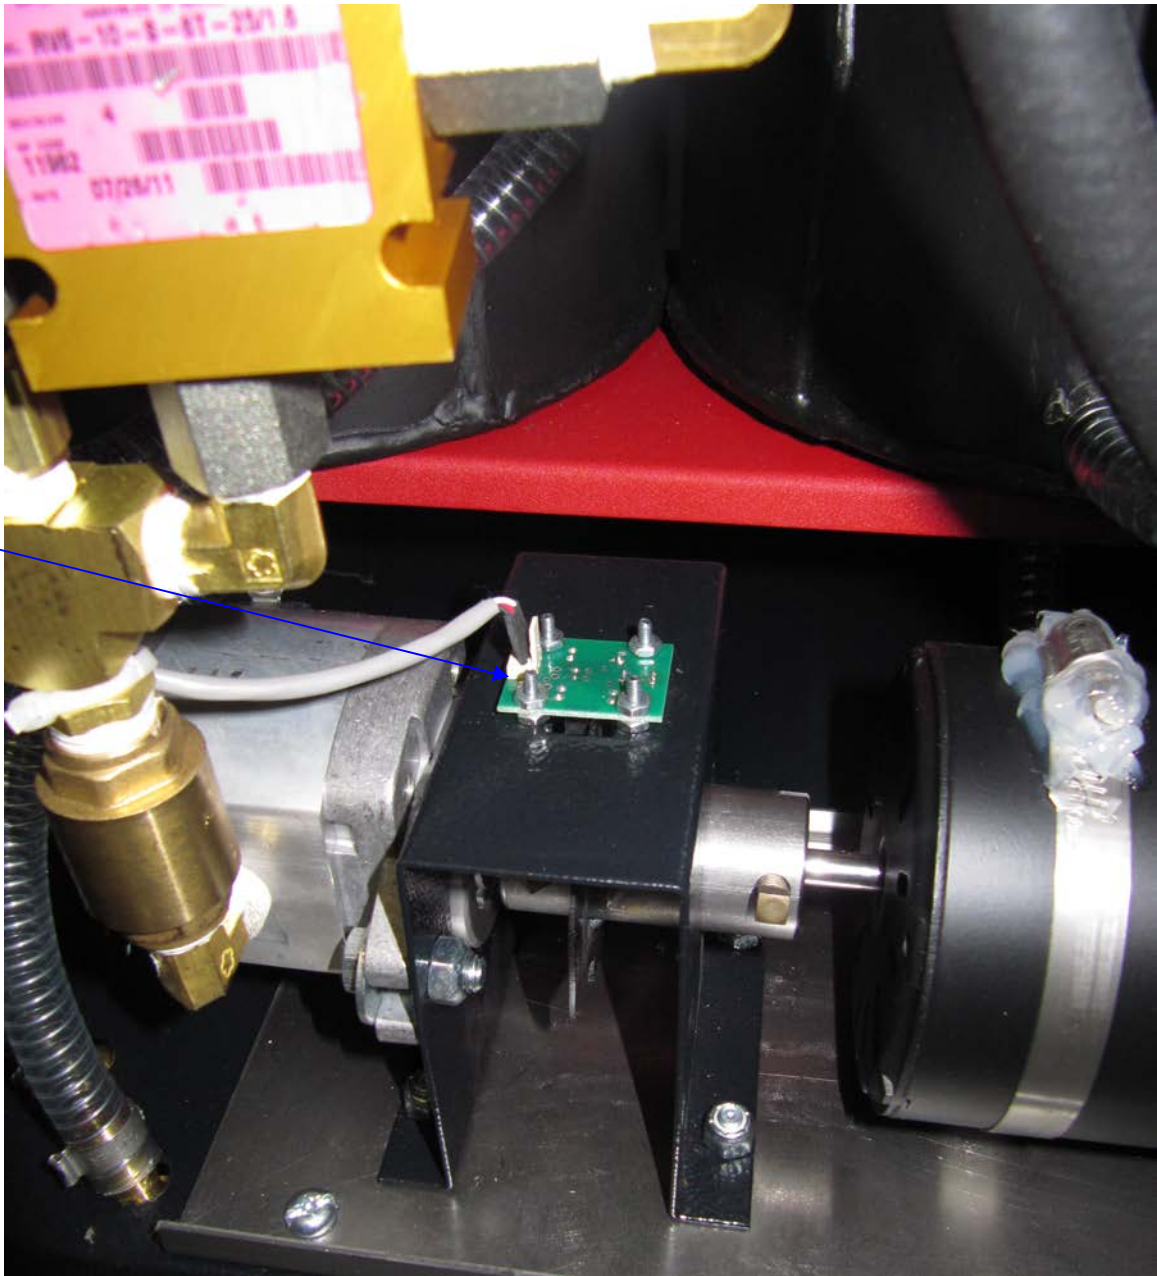

Take the end of the optical sensor and lead the wire up to the circuit board. Leading it behind all the components



Lead the wire up to the back of the circuit board. Plugging the end of the optical sensor into the third plug in.

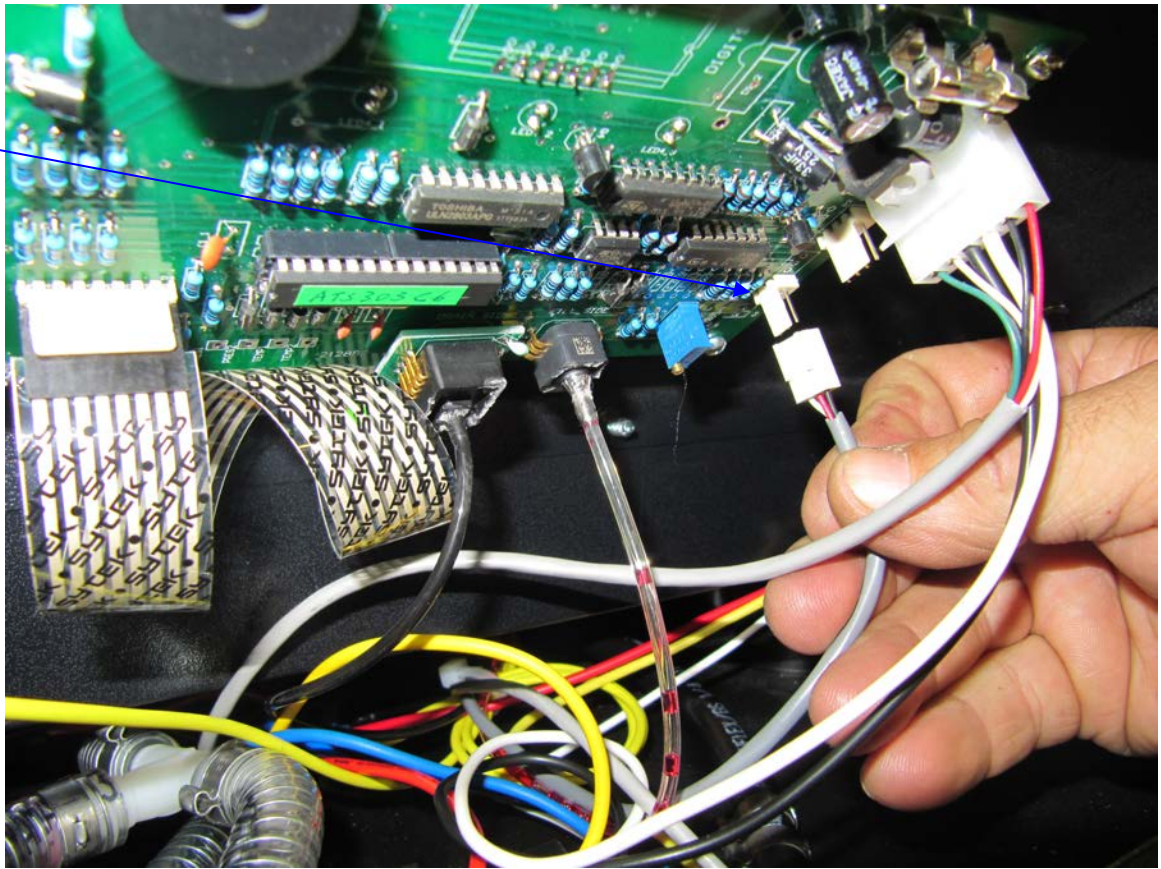

****BE CAREFUL NOT TO BEND THE SPOKES ON CIRCUIT BOARD****

All finished should be up and running.

